

<b>Motorentyp</b> <i>(engine type)</i>	<b>Lagerbezeichnung</b> <i>(product type)</i>		<b>SKL</b> <i>(designation)</i>	<b>ADMOS</b> <i>(designation)</i>
<b>VD 26/20</b>	Grundlager	main bearing	601-02001	1078010
	1. Reparaturstufe	1th repair stage	601-83001	1078110
	2. Reparaturstufe	2th repair stage	601-83002	1078210
	3. Reparaturstufe	3th repair stage	601-83003	1078310
	4. Reparaturstufe	4th repair stage	601-83004	1078410
	5. Reparaturstufe	5th repair stage	601-83005	1078510
	6. Reparaturstufe	6th repair stage	601-83006	1078610
	Pleuellager	connecting rod bearing	601-08010	1076020
	1. Reparaturstufe	1th repair stage	601-83010	1076120
	2. Reparaturstufe	2th repair stage	601-83011	1076220
	3. Reparaturstufe	3th repair stage	601-83012	1076320
	4. Reparaturstufe	4th repair stage	601-83013	1076420
	5. Reparaturstufe	5th repair stage	601-83014	1076520
	6. Reparaturstufe	6th repair stage	601-83015	1076620
	Kolbenbolzenbuchse	small end bush	601-08003	1504137
	Anlaufring	thrust ring	601-02002	9007001
	Lagerschild	Bearing Shield	601-20902	7009003
	Stützlager	support bearing	601-20041	1509006
	Antriebslager (Flansch)	drive bearing	601-25904	7004003
	Bundbuchse	collar bush	601-25060	4504017
	Flanschnabe 100/55	flanged hub 100/55	601-21943	7004005 & 1503124
	Flanschnabe 112/50	flanged hub 112/50	601-21016	7003003 & 1503056
	Flanschnabe 112/55	flanged hub 112/55		7004004 & 1503124
	Lagerbuchse	bearing bush		1505023
	Lagerschild	bearing shield		7009003
	Buchse	bushing		1503124
	Buchse	bushing		1503056

<b>Motorentyp</b> <i>(engine type)</i>	<b>Lagerbezeichnung</b> <i>(product type)</i>		<b>SKL</b> <i>(designation)</i>	<b>ADMOS</b> <i>(designation)</i>
<b>NVD 26-2</b>	Grundlager	main bearing	572-02008	1076040
	1. Reparaturstufe	1th repair stage		1076140
	2. Reparaturstufe	2th repair stage		1076240
	3. Reparaturstufe	3th repair stage		1076340
	4. Reparaturstufe	4th repair stage		1076440
	5. Reparaturstufe	5th repair stage		1076540
	6. Reparaturstufe	6th repair stage		1076640
	Pleuellager	connecting rod bearing	572-08012	10/3075044
	1. Reparaturstufe	1th repair stage		10/3075144
	2. Reparaturstufe	2th repair stage		10/3075244
	3. Reparaturstufe	3th repair stage		10/3075344
	4. Reparaturstufe	4th repair stage		10/3075444
	5. Reparaturstufe	5th repair stage		10/3075544
	6. Reparaturstufe	6th repair stage		10/3075644
	Paßlager	Thrust Wascher	572-02009	10/5076036
	1. Reparaturstufe	1th repair stage		10/5076136
	2. Reparaturstufe	2th repair stage		10/5076236
	3. Reparaturstufe	3th repair stage		10/5076336
	4. Reparaturstufe	4th repair stage		10/5076436
	5. Reparaturstufe	5th repair stage		10/5076536
	6. Reparaturstufe	6th repair stage		10/5076636
	Kolbenbolzenbuchse	Piston pin Bush	572-08005	1504640
	Nockenwellenbuchse	camshaft bushing	771-05013	1577020
	<b>NVD 36</b>	Grundlager	main bearing	672-02008
1. Reparaturstufe		1th repair stage		1076152
2. Reparaturstufe		2th repair stage		1076252
3. Reparaturstufe		3th repair stage		1076352

<b>Motorentyp</b> <i>(engine type)</i>	<b>Lagerbezeichnung</b> <i>(product type)</i>		<b>SKL</b> <i>(designation)</i>	<b>ADMOS</b> <i>(designation)</i>	
<b>NVD 36</b>	4. Reparaturstufe	4th repair stage		1076452	
	5. Reparaturstufe	5th repair stage		1076552	
	6. Reparaturstufe	6th repair stage		1076652	
	Pleuellager	connecting rod bearing	672-08007	10/5076059	
	1. Reparaturstufe	1th repair stage		10/5076159	
	2. Reparaturstufe	2th repair stage		10/5076259	
	3. Reparaturstufe	3th repair stage		10/5076359	
	4. Reparaturstufe	4th repair stage		10/5076459	
	5. Reparaturstufe	5th repair stage		10/5076559	
	6. Reparaturstufe	6th repair stage		10/5076659	
	Kolbenbolzenbuchse	piston pin bushing	672-08010	1505314	
	Druckstück	thrust piece	672-02007	7018012	
	Nockenwellenlager	camshaft bearing	672-21018	7013049	
	Nockenwellenlager	camshaft bearing	672-21019	7014063	
	<b>NVD 48</b>	Grundlager	main bearing	832-02010	1078038
		1. Reparaturstufe	1th repair stage		1078138
2. Reparaturstufe		2th repair stage		1078238	
3. Reparaturstufe		3th repair stage		1078338	
4. Reparaturstufe		4th repair stage		1078438	
5. Reparaturstufe		5th repair stage		1078538	
6. Reparaturstufe		6th repair stage		1078638	
Pleuellager		connecting rod bearing	832-08010	10/5078052	
1. Reparaturstufe		1th repair stage		10/5078152	
2. Reparaturstufe		2th repair stage		10/5078252	
3. Reparaturstufe		3th repair stage		10/5078352	
4. Reparaturstufe		4th repair stage		10/5078452	
5. Reparaturstufe		5th repair stage		10/5078552	

Motorentyp (engine type)	Lagerbezeichnung (product type)		SKL (designation)	ADMOS (designation)
<b>NVD 48</b>	6. Reparaturstufe      6th repair stage			10/5078652
	Kolbenbolzenbuchse	piston pin bushing	832-08013	1506395
	Nockenwellenlager	camshaft bearing	832-21908 / 21024	7015073
	Nockenwellenlager	camshaft bearing	832-21906 / 21023	7014061
	Nockenwellenlager	camshaft bearing	832-21023	7014064
	Gleitstück	sliding piece	832-02006	7019038
	Kompressorpleuellager	connecting rod bearing	832-35028	7016001
	Flansch 110	flange 110	832-21909	7006007 / 4505062
	Buchse	bushing		1503126
<b>NVD 24/24</b>	Grundlager	main bearing	751-02001	1078039
	1. Reparaturstufe      1th repair stage			1078139
	2. Reparaturstufe      2th repair stage			1078239
	3. Reparaturstufe      3th repair stage			1078339
	4. Reparaturstufe      4th repair stage			1078439
	5. Reparaturstufe      5th repair stage			1078539
	6. Reparaturstufe      6th repair stage			1078639
	Pleuellager	connecting rod bearing	751-08009	1078041
	1. Reparaturstufe      1th repair stage			1078141
	2. Reparaturstufe      2th repair stage			1078241
	3. Reparaturstufe      3th repair stage			1078341
	4. Reparaturstufe      4th repair stage			1078441
	5. Reparaturstufe      5th repair stage			1078541
	6. Reparaturstufe      6th repair stage			1078641
	Kolbenbolzenbuchse	piston pin bushing	571-08005	1505056